Thank you for your purchasing this color television.
To ensure your complete understanding, please read this manual thoroughly before operation.

CONTENTS

SPECIFICATIONS… ……1
SAFETY PRECAUTIONS…… ……2
LOCATION OF CONTROLS……3
INTRODUCTION …… …… …3
INITIAL OPERATION…… …… ……6
TV PLAYER OPERATION …… 6
DVD PLAYER OPERATION… …… 15
BASIC OPERATION…… ……... 18
DVD MENU SETUP……..... 21
PLAY MP3……..…….. … 26
JPEG FILE DECODE PLAY…….. … 27

SPECIFICATIONS

- Receiving system: RF: PAL B/G ,I
  AV: NTSC3.58 NTSC4.43 PAL
- Channel range:VHF: E2-E12
  UHF: E21-E69
  S band: S1-S41
- Power consumption:≤90W
- Number of stored programs: 99
- Power supply: AC200V-240V 50Hz
- Sound output: ≥2W×2

Note：All specifications are subject to change without notice.

SAFETY PRECAUTIONS

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK. DO NOT REMOVE COVER(OR BACK).
NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.
The graphic symbols on the back cover of the set mean the following:

The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

INSTALLATION

LOCATE the receiver in the room where direct light does not strike the screen. Total darkness or a reflection on the picture screen can cause eyestrain. Soft and indirect lighting is recommended for comfortable viewing.
ALLOW enough space between the receiver and the wall to permit proper ventilation.
AVOID excessive warm locations to prevent possible damage to the cabinet or component failure.

CONNECTION

This TV receiver can be connected to 200V-240V ~ 50Hz, NEVER connect to DC supply or any other power.

AUTOMATIC DEGAUSSING

All colour television receivers are sensitive to magnetic influences, usually caused by either moving the receiver from one place to another or using certain electrical appliances near the receiver. This residual magnetism as it is called, sometimes causes distortion which gives rise to "blotchy" areas of colour in the picture. To avoid these effects the receiver incorporates an automatic degaussing circuit which operates for a short while immediately each time the receiver is switched on using the mains switch. This circuit removes any residual magnetism in the metal parts of the picture tube and therefore ensures that each time the receiver is switched "ON" using the Mains switch, the purity of the colours displayed on the screen remain true and lifelike. If the set is moved or faced in a different direction, the mains switch must be switched off at least 10 minutes in order that the automatic degaussing circuit operates properly.

LOCATION OF CONTROLS

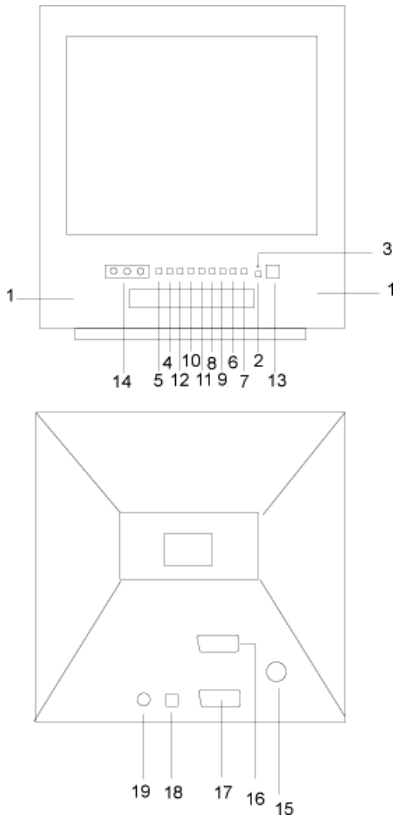

1. Speaker
2. Indicator
3. Remote control receiving window
4. TV/AV Button
5. Menu Button
6. OK Button
7. Volume Button (V-)
8. Volume Button (V+)
9. Channel Button (CH-)
10. Channel Button (CH+)
11. DVD Play/Pause Button
12. DVD Open/Close Button
13. Main power switch
14. Front AV Socket
15. 75 ohm Antenna Socket
16. AV SCRAT socket
17. DVD SCRAT socket
18. Audio digital Out Sockets (For DVD only)

Interface description:

1 Front AV: AV2 signal input in TV mode.

2 AV SCRAT : FULL SCART,AV1 signal input and AV signal output and R/G/B signal input in TV mode.

3 DVD SCRAT: in DVD mode,containing one AV(CVBS) output.

4 Optical fiber: in DVD mode,optical fiber signal(digital and audio) output.

5 Coaxial: in DVD mode,coaxial signal(digital and audio) output.

INTRODUCTION

FEATURE

TV PART

- Multi-System
- New I^2C Bus Control; New Super Chip Chassis
- 99 Programs Ready
- AV Input/Output;
- Auto Search; Auto Memory; Program Fine Adjustment
- Multi-menu Display
- Blue Background Without Signal

- Program Preset; Program Scan; Recall
- Full Function Remote Control
- AV Stereo

DVD PART

- Full Compatibility With DVD, CD, MP3, VCD, PHOTO-CD, CD+R(W), CD-R(W);
- Adjustable Screen Aspect Ratio (4:3 or 16:9);
- 32 Subtitles/8 Languages Supporting;
- Parental Lock Control;
- Program/Random/Repeat/Repeat AB/Goto Function;
- Build-in Dolby Digital AC-3 Surround Sound Decoder;(optional)
- 10 Bit Video DAC;
- Multiple Viewing Angle;
- Smart Upgrade Function

STATIC ELECTRICITY

If touch the screen while turning on/off the power, you may feel current. Anyway it is harmless.

ANTENNA CONNECTION

The performance of the receiver may be better if outdoor antenna is connected. Which type of antenna is most suitable to the receiver may depend on local condition. If you need any help, please contact your local distributors.

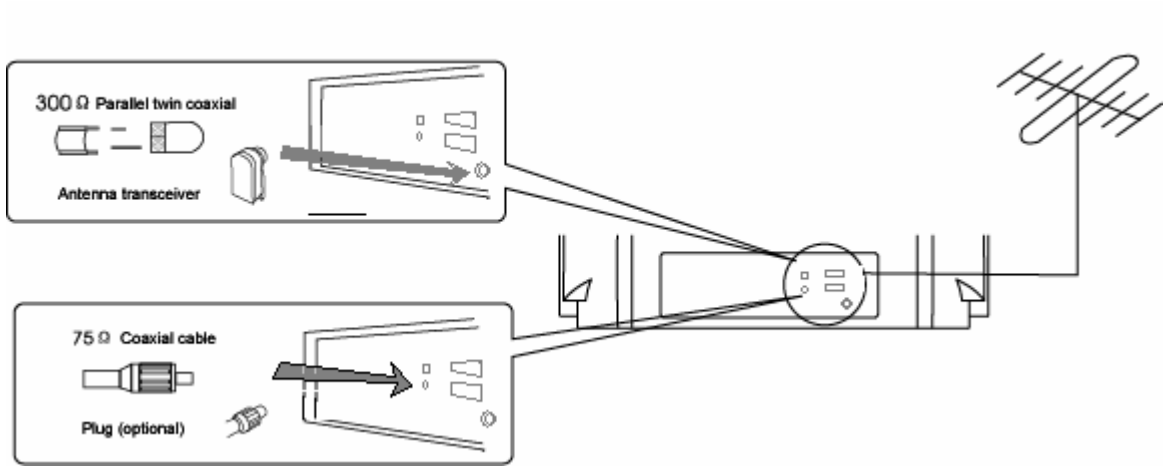

NOTE:

Disconnect the indoor antenna when using outdoor antenna. It is advisable to use 75 coaxial cable to eliminate the interference and noise caused by radio waves. Do not bind antenna cable and power cord together.

EURO-SCART CONNECTORS

When using a satellite receiver (or a video recorder) for TV reception with a SCART connection cable, you must connect additionally the antenna cable (antenna cable and SCART cable) as with using the SCART cable only, the reception of Teletext will not be possible.

REMOTE CONTROLLER

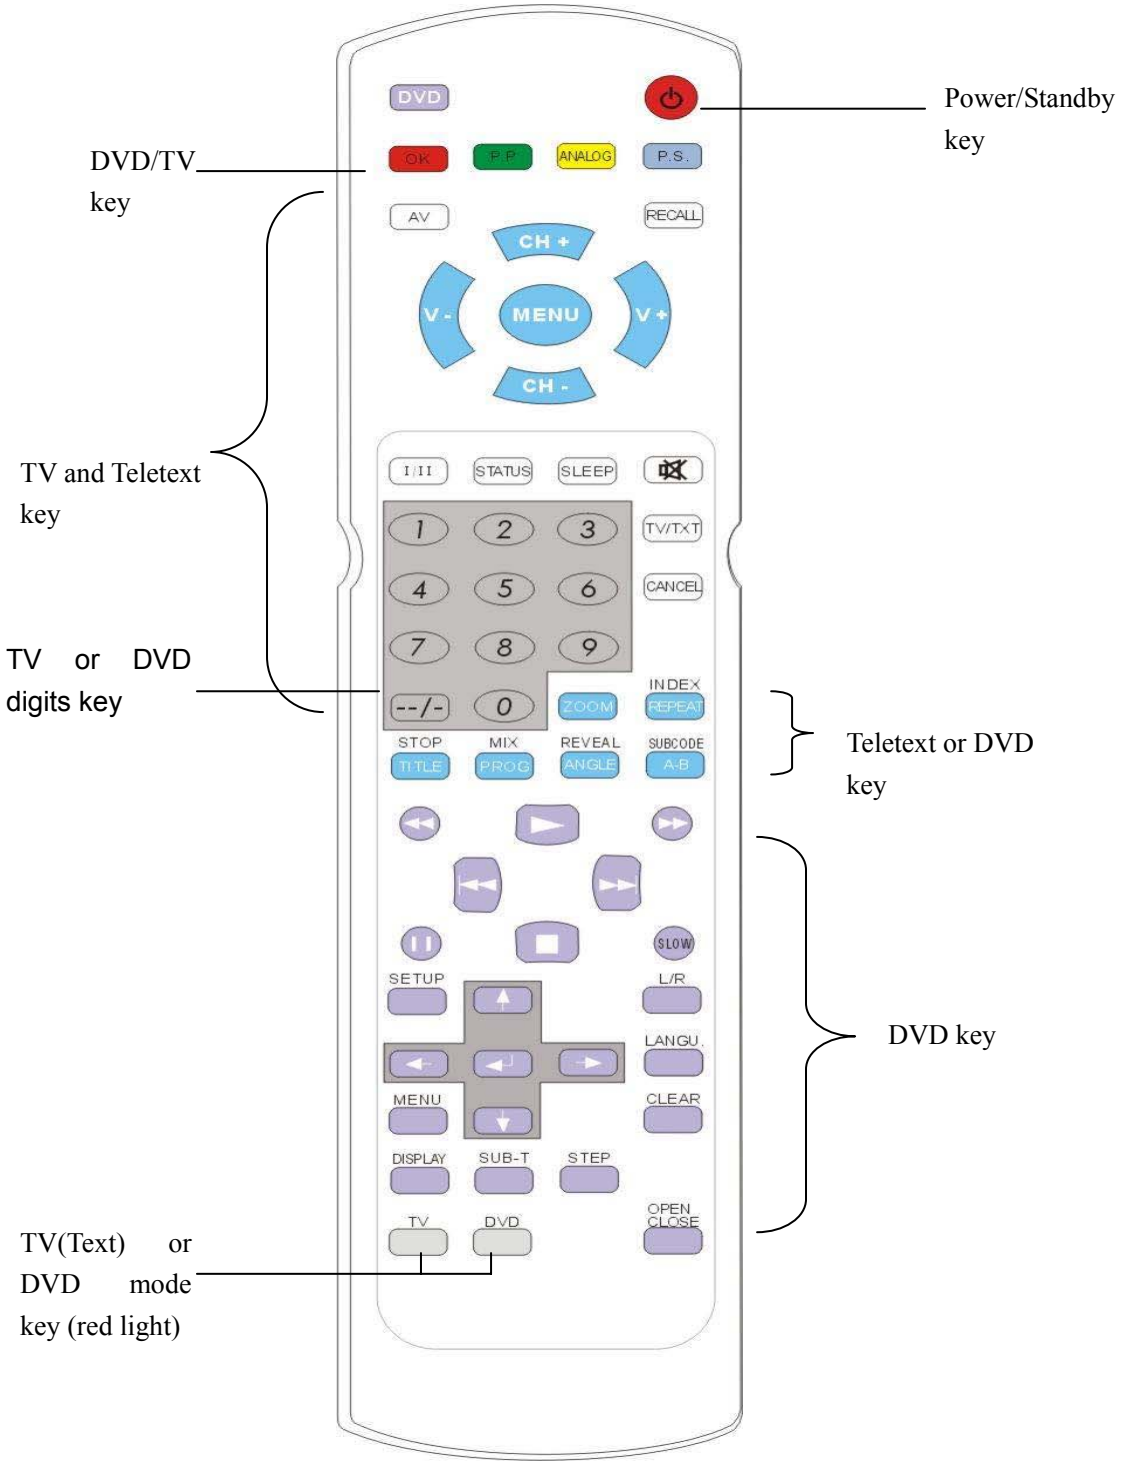

NOTE:

1. **Open the cover.**
2. **Insert two 1.5v batteries and make sure that the polarity of "+/-" matches with the polarity marked in the remote control case respectively.**

NOTE:

1. **If The Remote Controller Will Not Be Used For A Long Period Of Time Or If The Batteries Run Out, Please Take Out The Batteries To Prevent Leakage.**
2. **Do not drop the batteries into fire.**
3. **Make sure not to drop, dampen, disassemble the remote.**

INITIAL OPERATION

CONTROL YOUR TV

HOW TO POWER ON/OFF THE RECEIVER

1. Press the main power switch on the set board. The indicator will turn on.
2. If no picture shows on screen, it indicates the set in standby. There after press " ⏻ " button on the remote controller.

NOTE:

Besides the " ⏻ " button, pressing the direct select button (0~9) is effective to activate the receiver. If any preferred channel has been preset, selecting the corresponding number button (0~9) can direct to the target program.

If the remote controller is not currently available, the receiver can also power on by the press of "CH+,CH-" on the set board.

NOTE:

This only works when the set is receiving TV Signal.

3. Press the " ⏻ " button on the remote controller to switch the receiver to standby mode.
4. Press the main switch to power off the receiver. The power indicator will turn off.

NOTE:

1. **If the power is cut-off electrically when appreciating programs, the receiver shall be turned off completely or disconnect the power plug;**
2. **Turn off the receiver completely if long period of non-use for the power consumption is about 10W in standby mode.**

TV PLAYER OPERATION

Operations by the keys on the Front Cabinet

1 **Main Power Switch**

Press to switch on the main power. The set will go into power on or standby mode and the indicator will be alight . When it is pressed again,TV set can be turned off.

2 

Program Selector CH+ and CH- buttons

Under standby mode, press **CH +** or **CH -** to turn the set on. Press **CH+** to select upwards the TV channel or **CH-** to select downwards the TV channel, program number will be displayed for 4 sec.

3 

Volume V+ and V- buttons

Press **V +** to increase the sound level or **V -** to decrease the sound level, volume bar will be displayed.

4 

MENU and OK button

To minimize the number of keys on remote , the less frequent used

functions are only accessible via menus. These menus are controlled by following keys.
MENU button select the different menus. It is also used to return from a submenu to menu.
CH+ and **CH-** keys for selecting items in a particular menu.
V+ and **V-** keys for changing the value of selected item .
OK key to enter a Sub menu.

5

AV Switch button
Select external video to view. Press the button once to viewing program from AV1 (AV SCRAT)and AV2(Front AV Socket).



6
DVD Play/Pause buttons
The play will be paused when this key is pressed once. When it is pressed again, play will continue.

7
DVD Open/Close buttons
This key is used to control the entry and exit of discs. The tray enters when it is pressed, and comes out when it is pressed again.

Operations by the keys on the Remote Controler

1

DVD /TV key
Press "DVD/TV" key to turn on the DVD, When it is pressed again, to turn on the TV.

2

TV mode key
Press TV mode key, the red light shows the remote controller changed to TV mode. This remote controller use for TV mode and teletext mode.The TV mode key is red light when press TV or TELETEXT key .

3
POWER key
This key turns the set from the standby condition into ON. Picture and sound will appear, Press again into standby .

4 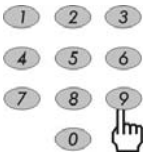

0-9 digits key
Press to select TV stations directly, program number will be displayed on the screen for 4 sec.

5 

--/- key
For programs 10~99, it can be accessed by pressing key **--/-** first, Say if you want to access program 23 , press key **--/-** to see **--** on the screen , then press 2 and within 2 seconds of pressing 2 ,

press key 3. If key 3 is not pressed within 2 seconds the program accessed is program number 2.

6 **AV key**



Select external video to view. Press the button once to viewing program from AV1 (AV SCRAT Full Scart) and AV2 (Video, Audio).



7 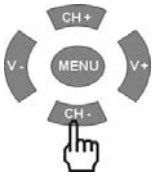

CH+/CH- key

Press **CH+** to select the stations upward and **CH-** to select downwards, program number will be displayed for 4 sec. When Teletext is active, these keys increase or decrease the current teletext page.

8 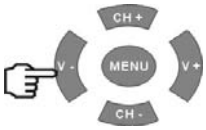

V+/V- key

Press the **V+** or **V-** to set the sound level higher or lower, volume bar will be displayed.

9

MUTE key

Press to switch off the sound temporarily. The mute sign will be displayed. Press again to recover the sound from mute.

10

STATUS key

Press to view present program number, system, Status display will last for 4 sec.

11

SLEEP key

The set will switch OFF if the sleep timer expires . The Sleep timer can be set in steps of 10 minutes with a maximum of 120 minutes.

12

RECALL key

Press it for the first time to view the previous program. Press it for the second time to return the present program.

13

P.P. key

The TV picture can be adapted to suit the current lighting conditions. Press Successively to select the desired settings. The same key is used in TXT.

Soft Dynamic Favourite Standard

STANDARD, SOFT and **DYNAMIC** are preset values of **Brightness, Contrast** and **Colour**, whereas **FAVOURITE** is the last analog setting that the user had set.

14

ANALOG key

Press key **ANALOG** you will have the right to choose the picture and sound settings as follow:

VOLUME→BRIGHTNESS→CONTRAST→COLOR→SHARPNESS

The same key is used in TXT.

15

MENU and OK keys

This menu contains four sub-menus used for selecting various parameters of picture and sound or various Timer, tuning functions.

Press the **MENU** key continuously, the following menus will appear in turn:

Picture Menu→ Install Menu → Setup Menu → Menu Off.

It is also used to return from a submenu to menu.

CH+ and **CH-** keys for selecting items in a particular menu.

V+ and **V-** keys for changing the value of selected item .

OK key to enter a Sub menu. The key is also used in TXT.

15.1 PICTURE MENU :

If press the Menu key for the first time, we can get Picture menu.

The Picture menu has following Sub menus :

a) Brightness (64 Steps)

b) Contrast (64 Steps)

c) Colour (64 Steps)

d) Sharpness (16 Steps)

These items could be selected through **CH+ / CH-** keys. All items could be varied using **V+ / V-** keys. The graphic and numeric display of the control level of selected item is displayed at the bottom of the screen.

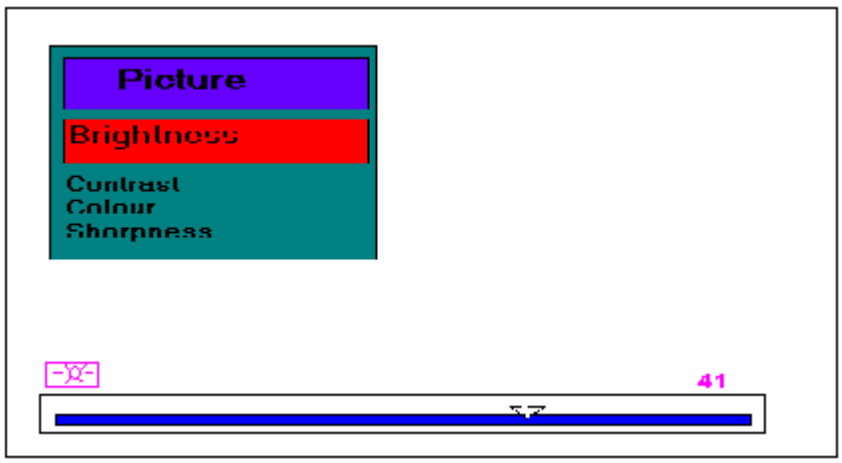

15.2 INSTALL MENU :

The Install menu has following 4 items :

a) Auto Tune

b) Manual Tune

c) Fine Tune

d) Store

These items are accessed using **CH+ / CH-** key.

For Auto Tune :

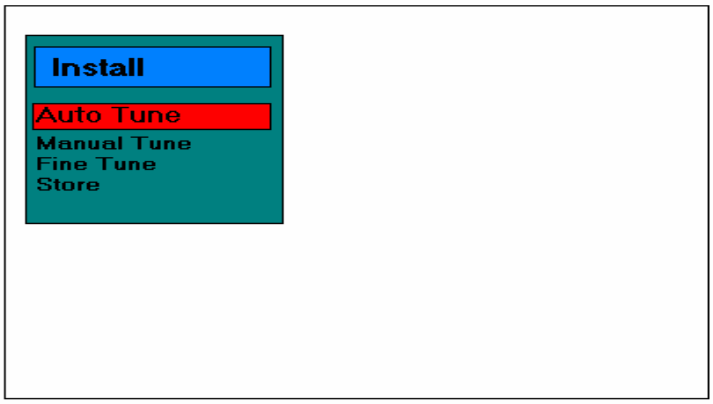

If **Auto Tune** is selected in this menu, then by pressing **OK** key on **Auto Tune** will start the auto search process.

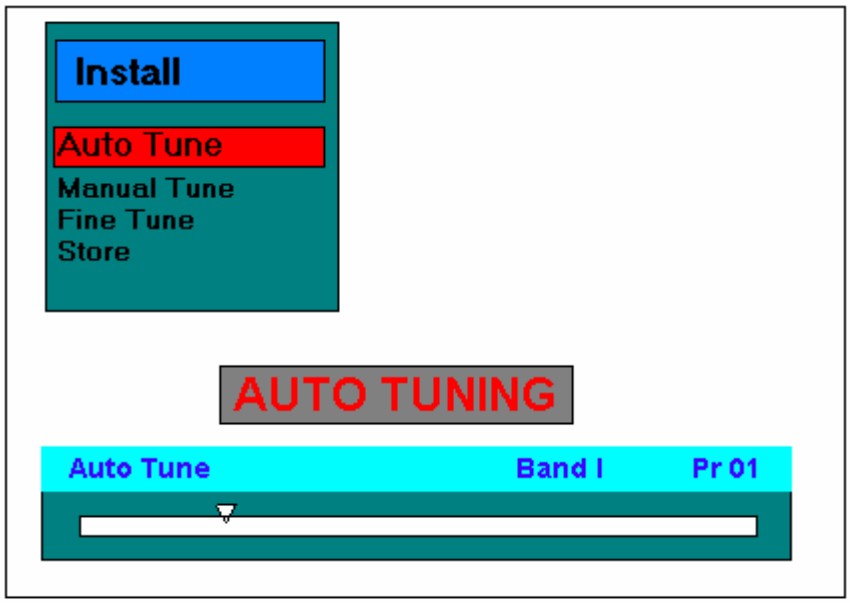

Auto Tune will automatically search through all the bands for any available stations in transmission and store them consecutively into program numbers 01 onwards.
Progression of operation will be indicated by moving of bar display , changing of band and program number. The Auto Tune can be aborted using **MENU** or **POWER** Key.
Whenever a program is stored the Colour system is put as **AUTO** . For sound system the Carrier levels (4.5 / 5.5/ 6.0 / 6.5 MHz) are compared and the one with the highest level is tagged with the program. Also the label is reset back to **- - - -.**

For Manual Tune :

If **Manual Tune** is selected, by pressing **V+/V-** key , **Manual Tune** will start and display as following will appear on screen.

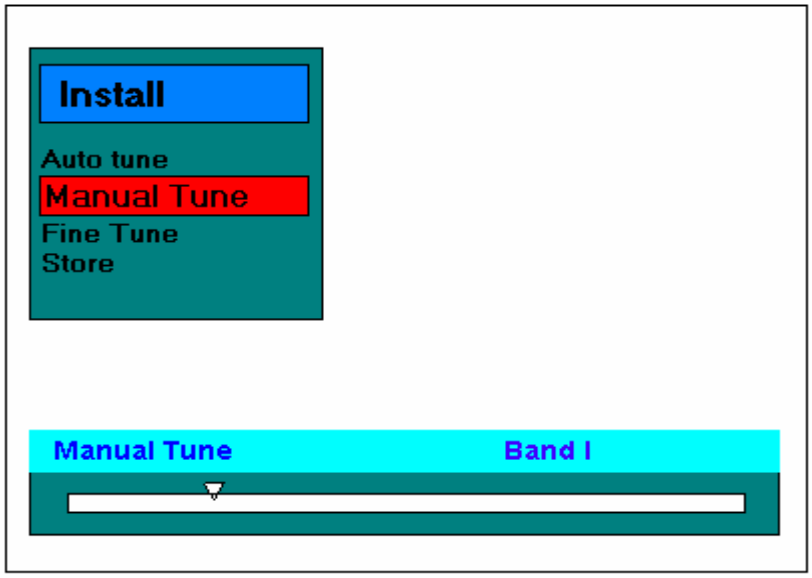

If **V+** key was pressed in **Manual Tune** ,it will search for next available station and Stop where the signal is received. If **V-** key is pressed it searches in the negative direction and will search for the previous channel.
During **Manual Tune** only **MENU** and **POWER** key is recognised , rest of the keys are ignored.

For Fine Tune :

If **Fine Tune** is selected, activation of **V+/V-** key will tune forward / backward. The bar graph will show the deviation in positive or negative direction with repect to the Stored tuning information.
If user stores the fine tune value by using the **STORE** function, the value will effective even if the TV set have been shutdown.

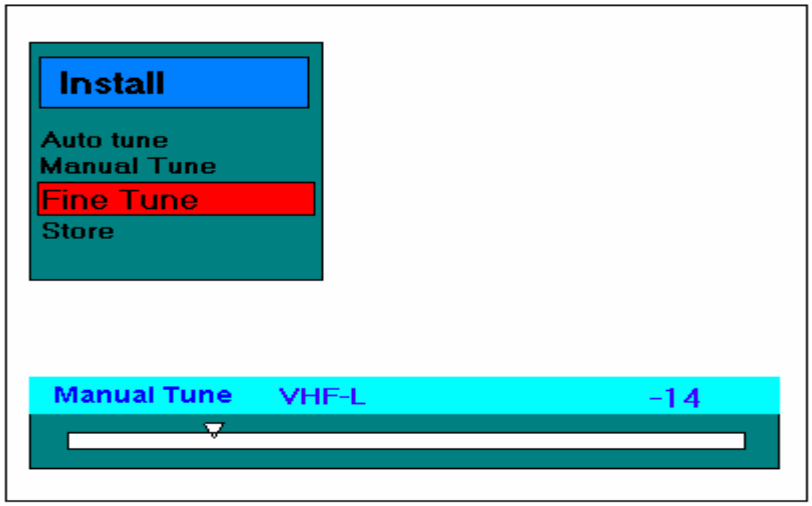

For Store :

When **OK** key is pressed from item **Store ,** another submenu appears with 2 items namely **Program** (Program number to which you want to store the tuning info) and **Store**.

If item **Program** is selected , activation of **V+ / V-** keys will increase/decrease the program number entry. It can also be done by direct digit keys (Key 0 to 9 on remote handset). When item **Store** is selected and **OK** key is pressed ,the existing tuning information along with **AUTO** colour standard and sound standard (based on sound carrier strength level) will be stored in the Program number entered in item **PROGRAM** and **OK** display will appear beside item **Store.**

15.3 SETUP MENU

TIMER SUBMENU :

The Timer submenu has following items :

a) Time _ _ : _ _
b) On Timer _ _ : _ _
c) Off Timer _ _ : _ _
d) On Timer Pr_ _

Sub-menu is accessed using **OK** key.
For items (a) to (c) the **V-** key is used to change the hour (0 to 23) and **V+** Key to change minutes (0 to 59) . For item (d) **V-** key is used to decrement On Timer Program number and **V+** key is used to increment On Timer Program number(0 to 99).

The **On/Off Timer** and Program number will be disabled when the TV set is Power on. However, these setting will keep on when TV in Standby mode.

Auto ShutOff Timer :
When no Front end IDENT (from RF) is detected for APP. 5 minutes, the set will switch to standby automatically .

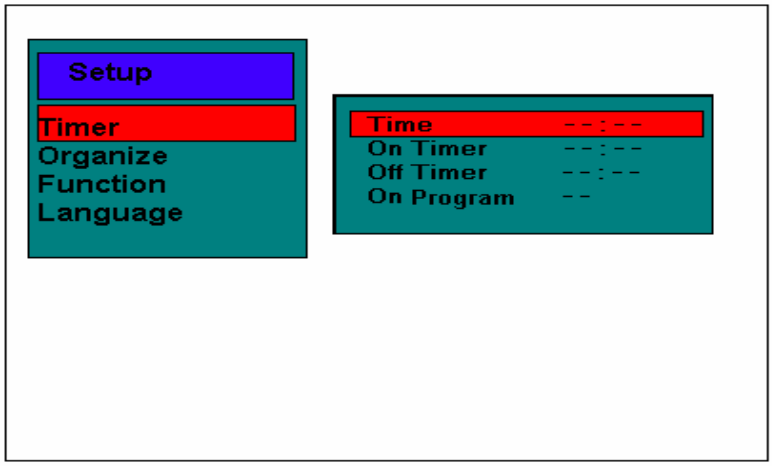

ORGANIZE SUBMENU :

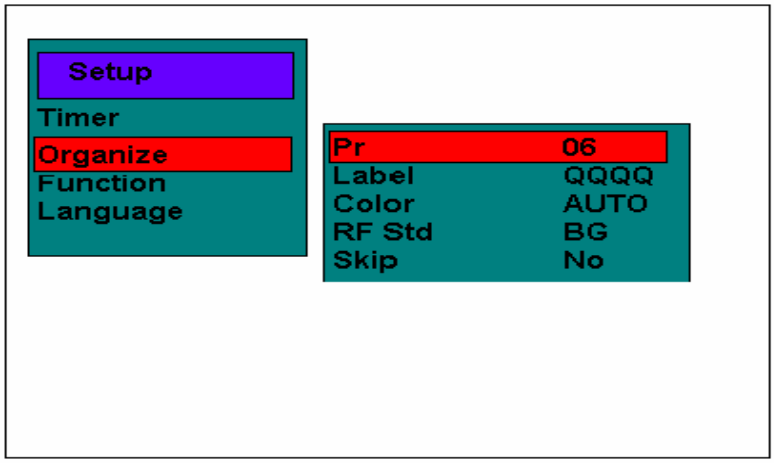

For Pr : Press **V+/V-** keys to Select a particular program.
For Label (ACTIVE ONLY IN ENGLISH): V+/V- keys are used to jump from one column to other. Red background shows the row selected and the selected column is blue and flash.
To access alphanumeric characters in the sequence A to Z ,+ , -, SPACE and 0 to 9 for **CH-** key and in reverse order of sequence for **CH+** key.The label hence gets tagged to the particular program.
For Picture : Select Colour standard as **AUTO, PAL , SECAM, NTSC1(4.43MHz), NTSC2 (3.58MHz)** by pressing **V+/V-** keys.The Standard selected gets tagged to the particular program.
For RF Std : Select RF standard as **BG/ DK/ I/ MN** by pressing **V+/V-** keys. The Standard selected gets tagged to the particular program.
For Skip : To Skip or not the particular channel by pressing **V+/V-** keys. You can still use the direct number keys to enter into the skipped channels.

FUNCTION SUBMENU :

If the Function selected and press **OK** key, the Function submenu will displayed. One of the items is accessed using **CH+/CH-** keys, the setting changed by using **V+/V-** keys.

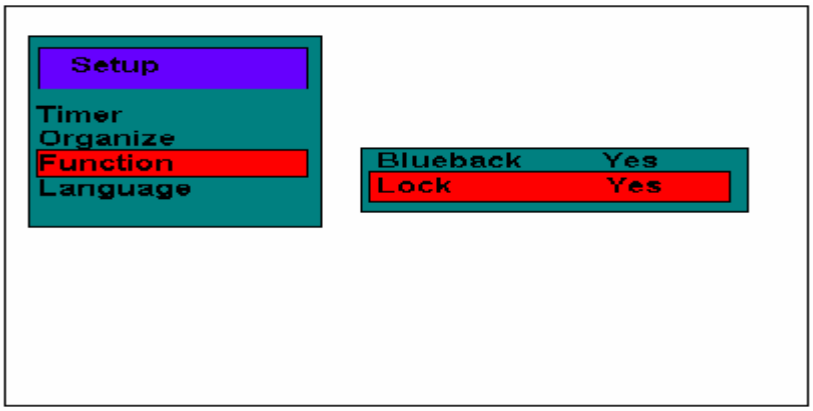

If the **lock** is changed from **No** to **Yes**, the lock menu will appear. In this mode, three digit can be keyed in and saved as the locking number. When the next time the TV is power on, the user must key in the locked numbers to enter the TV. And it's convenience for user to use the **P.P.** when they forget the lock number.

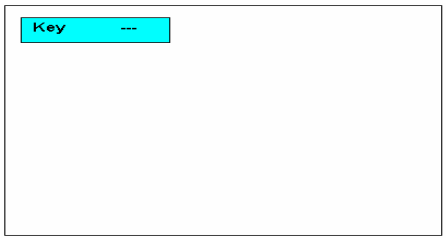

LANGUAGE SUBMENU :

If compilation option **LANGUAGE** is selected, Language menu appears on the screen. The Language menu has Following twelve items :

ENGLISH, FRENCH, GERMAN(Deutsch), ITALIAN, DANISH, SWEDISH, NORWEGIAN, SPANISH, PORTUGUESE, DUTCH(Nederlands), FINNISH(Suomi), GREEK.

One of the languages is accessed by using **CH+/CH-** keys.

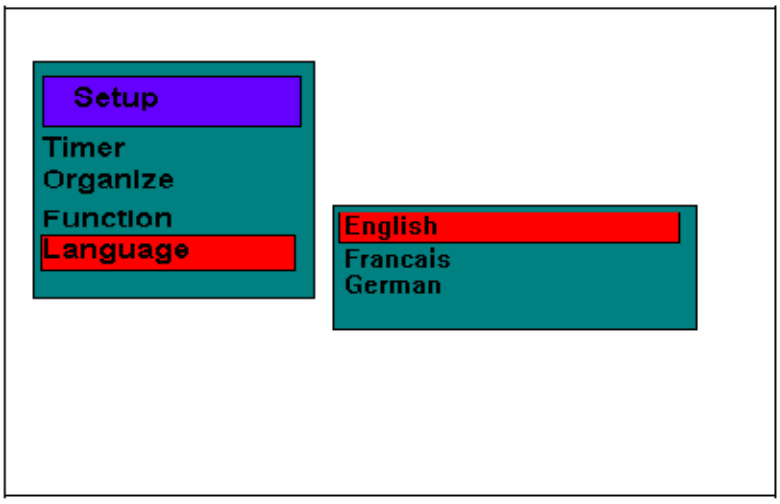

TELETEXT mode

1 **TV/TXT** key

Press the **TV/TXT** key to change the viewing condition from TV to Teletext if TV stations in your local have teletext broadcasting.

2 **STOP** key

This is a toggle function key which stops the current page acquisition to prevent teletext update. **STOP** can be released by requesting 3 digits page number again.

3 **REVEAL** key

This is a toggle function key to display hidden characters.

4

ZOOM key

This key is to expand character size and display half teletext page. Each press will display upper – tower – normal page.

5

Mix key

This is a toggle function key to display TV picture and teletext together or teletext only.

6 

SUBCODE key

This key allows the user to enter 4 digits subcodes for the current page. If subsequent digit is not entered within 5 sec, previous page number will be recalled and displayed on the screen.

7

Index key

Press this key will show the index page.

8

OK/ P.P. /ANALOG and P.S. key with Color key

These 4 color keys in teletext mode can quickly enter the pre-captured teletext pages.

9 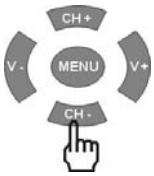

CH+/CH- keys

CH+/CH- key can be used as a page up/down key in teletext mode.

10

CANCEL key

This is a toggle function key to display the latest TV picture from the current teletext page or vice versa.

DVD Player Operation

DVD Mode operation key

0 

DVD mode key

Press DVD mode key, the red light shows the remote controller changed to DVD mode. This remote controller use for DVD mode , The DVD mode key is red light when press DVD key .

1

OPEN/CLOSE key

This key is used to control the entry and exit of discs. The tray enters when it is pressed, and comes out when it is pressed again.

2 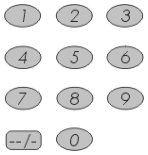

0-9 digits and --/- keys

"0-9"□"--/-" are number keys for program selection.

3

ZOOM key

With this function, you can view an enlarged picture and the expanded view range with ease.

4

REPEAT key

By pressing this key, a chapter, title or the whole program can be repeated

5

TITLE key

When this key is pressed, player will stop and it will go back to the title menu of the disc.

6

PROGRAM key

You can display with your own programming by pressing this key.

7

ANGLE key

When a displaying disc contains multi-angle video flow, it can be used to change view angles for your favorite angles.

8 

A-B key

You can repeat the play of specific chapter from A to B by pressing this key to set point A and then pressing it again to set point B.

9
FAST FORWARD and BACKWARD key

By pressing this key, you can look for your favorite pictures by fast forward or backward at 2, 4, 8 ,16and 32 times normal speed.

10
PLAY key

The set will Enter play when this key is pressed once.

11
PREVIOUS and NEXT key

During display, you can press the corresponding keys to directly jump to the next or previous music or program.

12
PAUSE key

The play will be paused when this key is pressed once. When it is pressed again, play will continue.

13
STOP key

Display is interrupted when it is pressed. When the play button is pressed this time, display will continue from the interrupted point. The continual display function is cancelled when this key is pressed two times in succession.

14

SLOW key

It enables slow display at 1/2, 1/4, 1/8,and 1/16 times normal speed.

15 L/R key

Pressing "L/R" key, you can switch over between different audio channels, providing multiple choices for users.

16 SETUP key

This key is used to set DVD internal function menu.

17 DIRECTION (UP,DOWN,LEFT,RIGHT) key

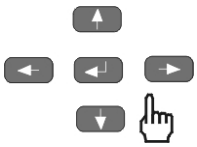

By pressing these keys, you can select sub-menus in a menu.

18 ENTER key

After a function is selected, this key is used to determine the function or the display.

19 LANGU (LANGUAGE) key

Pressing "LANGU" key, you can switch between different languages built in on the DVD disc.

20 MENU key

When playing DVD discs, some discs contain title menus or chapter menus, press (MENU) button to access this feature.

The TV screen will show menu picture and use arrow button to scroll. To confirm selection, press (PLAY) button.

Alternatively, use the Number button to select.

21 CLEAR key

The clear button is only available in certain mode Alternatively press. For example .Press CLEAR button to clear a bookmark.

22 DISPLAY key

You can press this key to control the DVD information display.

23 SUB-T(SUB TITLE) key

With this key, you can switch over subtitles of different languages built-in on the DVD disc.

24 STEP key

For DVD Discs, when playing the picture frame-by-frame the step function is used. To enter this mode, press the step button.

Pressing the (STEP) button each time will advance to the next frame.

Basic Operation

1. Press "DVD/TV" key on the remote control to turn on the DVD.
2. Press "DVD" mode key on the remote control ,the red light shows, the remote control have changed the DVD mode,now some TV or teletext key stop working and DVD key start.
3. Press the Open/Close button on the unit or remote control, and put in the Disc when the disc tray open.
4. Press Open/Close button , the disc tray close and DVD player starts play.

DVD Menu Operation

1. Press the Direction buttons or Number buttons to select the relevant subtitle.
2. Press ENTER.

Press STOP to Stop Play.

Press Stop once to stop play, then press PLAY, it will play from the stoppage. Open the disc tray or press the STOP twice, and continuous playing function will be canceled.

Screen Display

When DVD player play different disc, press DISPLAY button continuously, screen will display as follows:
DVD Disc: Press this button first time, it display working time of the chapter; Press it second time, display information of OSD, caption, angle etc.
VCD or SVCD: Press the button, it will display trace play time, track no, PBC etc information.

Select Title

1. Press TITLE, play will be stopped and return to subtitle menu of the disc.
2. Press the direction key or number key to select the subtitle.
3. Press ENTER to enter into chapter menu. (If user presses number key during the second step, enter the chapter menu without pressing ENTER key.)

NOTE:
Title button are workable when DVD player plays DVD disc only.

Select Menu

1. Press LIST button, play will stop and return to chapter menu of the disc, user can enter into the chapter menu by select subtitle, too.
2. Press direction key or number key to select the chapter.
3. Press ENTER (If user uses number key during the second step, it plays without pressing ENTER to play.)DVD Player will play according to the subtitle and chapter you selected.

Return to root directory

During play DVD disc, continuously presses MENU key, it will enter root directory menu directly with playing multi-directory menu disc.

Return to favorite title and chapter during the playing

Use return function, user can start play from any place.

1. Press TITLE, screen will display “TITLE_/_ CHAPTER_/_”
2. Press the relevant number key to select favorite title or chapter.
3. Press ENTER□DVD Player will start play from the title and chapter you selected.

NOTE:

The function is workable when play DVD disc only.

Express browse

1. Press ►► button every time, F.FWD will be circled according to as following:
   F.FWD ×2: play at 2 times speed than normal speed;
   F.FWD ×4: play at four times speed than normal speed;
   F.FWD ×8:play at 8 times speed than normal speed;
   F.FWD ×16: play at 16 times speed than normal speed;
   F.FWD ×32: play at 32 times speed than normal speed;
   return normal play
2. Press ◄◄ button every time, F.BWD function will cycle as following
   F.BWD ×2 play F.BWD at 2 times speed than normal speed;
   F.BWD ×4, play F.BWD at 4 times speed than normal speed;
   F.BWD ×8, play at 8 times speed than normal speed;
   F.BWD ×16, play at 16 times speed than normal speed;
   F.BWD ×32, play at 32 times speed than normal speed;
   return normal speed.

Slow play

When play the disc, press SLOW button continuously, SLOW BROWSE will cycle as following
SLOW PALY 1/2, play at 1/2 speed than normal;
SLOW PLAY 1/4, play at 1/4 speed than normal;
SLOW PLAY 1/8, play at 1/8 speed than normal;
SLOW PLAY 1/16, play at 1/16 speed than normal;
return normal speed.

Skip function

When play disc, press (⏮,⏭) PREVIOUS (NEXT) button, it will play previous (next) program.

Repeat play

Repeating subtitle, chapter and track

For DVD disc, press REPEAT button continuously, screen displays Chapter, Title and All in turn;

For VCD/super VCD,press REPEAT button continuously, screen displays repeating one track, repeating whole disc and off.

Repeating given segment

1. During playing, at the start (A point) of the segment that user want to repeat, press A-B button.
2. At the end (B point) of the segment that you want to repeat, press A-B button.
3. DVD disc will return A point, and begin to repeat the selected segment (A-B).

4. Press A-B button again, DVD player will return to normal play.

Picture ZOOM

This function can be used to enlarged picture and enjoy wider watching range.

During play, press ZOOM button, ZOOM mode will cycle as following,

ZOOM ×2, picture is enlarged 2 times;

ZOOM ×3, picture is enlarged 3 times;

ZOOM ×4, picture is enlarged 4 times;

Note: Playing CD, MP3, this function is not workable.

PROGRAM PLAY

Program function can play in favorite order.

1. Press PROG button,
2. Use DIGIT button and direction buttons to input the track number or subtitle or chapter number,
3. Then press ENTER button.

DVD player will begin to play in selected order.

Changing viewing angles

DVD disc have 9 angles picture at most. During play, user can select one discretionary angle to watch.

Select one favorite angle to watch.

During play, press ANGLE button, and DVD player will play another angle.

If disc have the menu for selection angle, you are able to select viewing angles by menu button.

NOTE:

This function is workable with multiple angles DVD disc, and the sign “ANGLE” on VFD is light when DVD player plays multiple angles disc.

Selection caption languages and of/off caption

DVD disc have 32 languages at most. During play, select on or off caption, or select one discretional language.

Selecting wanted caption language

During play, press LANGU button, caption languages mode cycles as following,

Caption1/N -the first caption language-caption 2/N – the second language – the N language – caption cancel – no caption

N is the total languages included in disc.

NOTE:

This function is workable with multiple caption languages DVD or super VCD disc.

Sound channel switch and sound volume adjustment

During play, press L/R button of remote control to switch sound channel, and press V- button and V+ button to decrease or increase sound volume to get favorite effect.

NOTE:

1. Above instruction is only for basic functions. For different discs, exact operation isn’t very same, such as displaying different signs on CTV screen, operation is to be done according to exact instruction.
2. Some discs permits special operation or limits some operation, so some functions of DVD player maybe not workable. This is not fault of DVD player, and please refers to instruction of disc.
3. When some operation is limited or forbidden, forbidden sign will be displayed at up left of screen.

4. Except for MP3, play operation of other discs (for example VCD, SVCD, DVCD, CD) is referred to DVD play operation.

Enter setting menu

By entering the SETTING menu, all DVD options can be set. Once setup, all DVD discs can be played with these settings.

1. Press **SETUP** button. The DVD player will stop playback, and the function setting menu will be displayed.
2. Press the direction arrow buttons to move the cursor to select the required sub-menu.
3. Press ENTER button to confirm.

Press SETUP button again, return directly.

DVD menu setup

Following options can be selected in menu:

General SETUP

General setup includes TV Display, Angle Mark, OSD Lang, Screen Saver.

a. TV Display

Press up/down buttons to move the cursor to select following option, and press ENTER button to confirm.

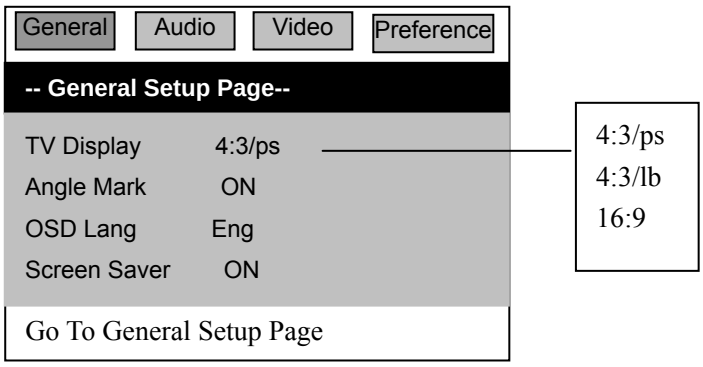

b. Angle Mark

Press up/down buttons to move the cursor to select following option, and press ENTER button to confirm.

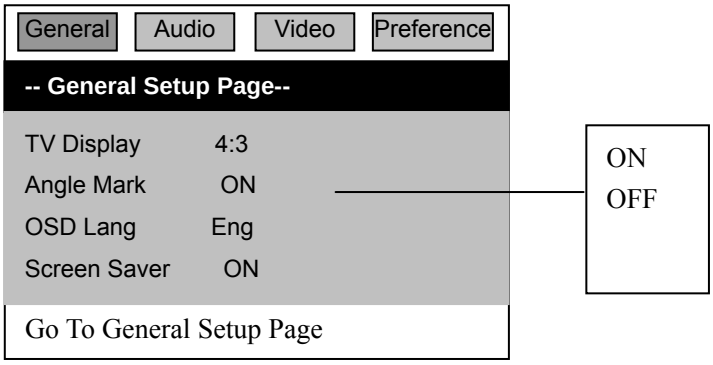

c. OSD Lang

Press up/down buttons to move the cursor to select following option, and press ENTER button to confirm.

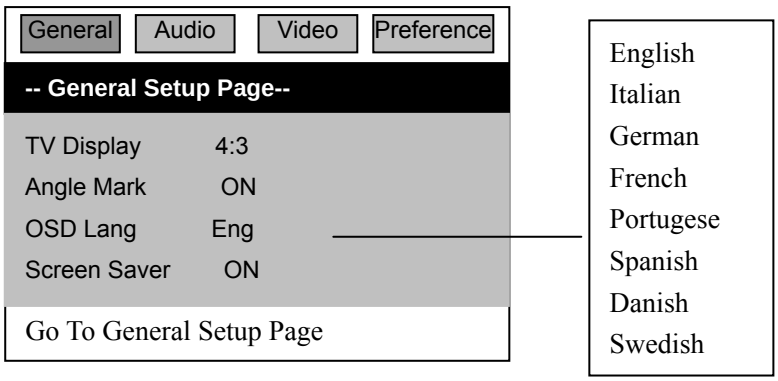

d. Screen Saver

Press up/down buttons to move the cursor to select following option, and press ENTER button to confirm.

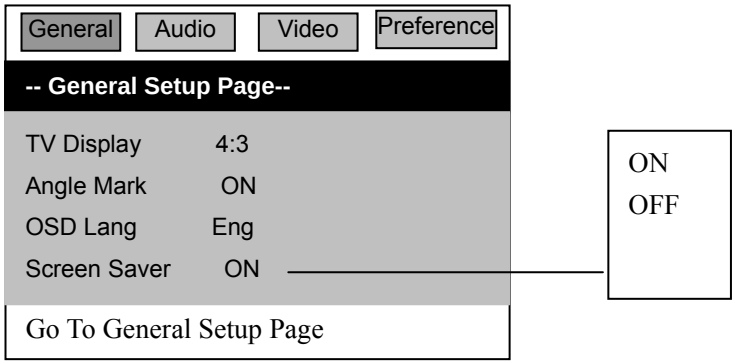

Audio SETUP

Audio SETUP includes Downmix

Press up/down buttons to move the cursor to select following option, and press ENTER button to confirm.

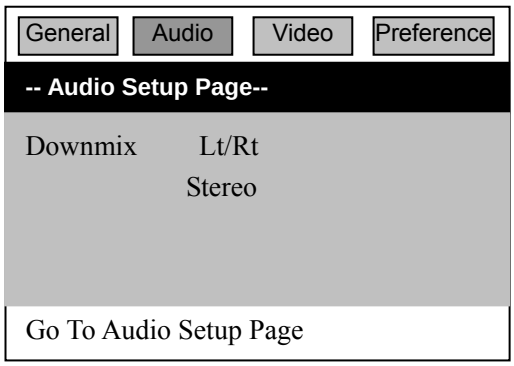

Video SETUP

Video SETUP includes Sharpness, Brightness, Contrast.

a. Sharpness

Press up/down buttons to move the cursor to select following option, and press ENTER button to confirm.

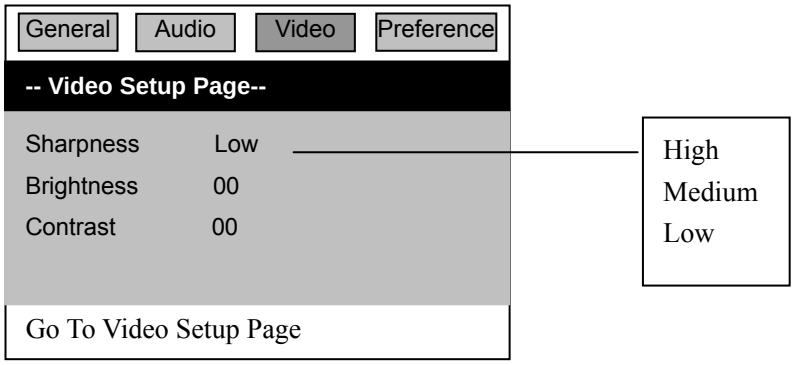

b. Brightness

Press up/down buttons to move the cursor to select following option, and press ENTER button to confirm.

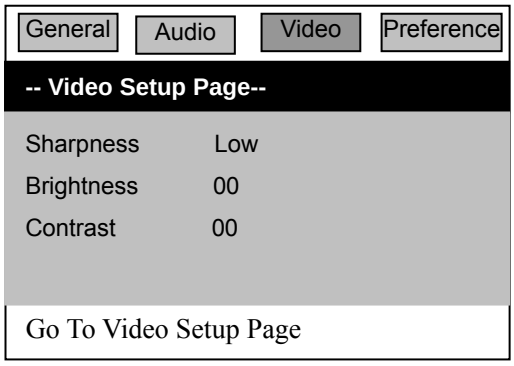

c. Contrast

Press up/down buttons to move the cursor to select following option, and press ENTER button to confirm.

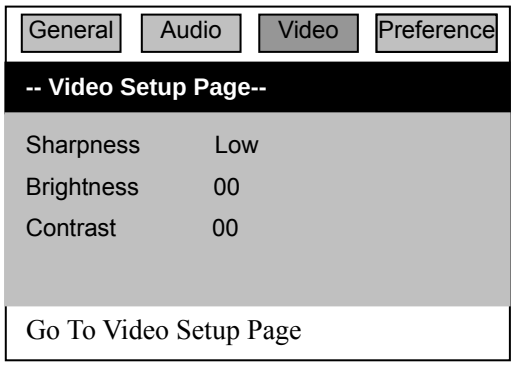

Preference SETUP

Preference SETUP includes TV Type, Audio, Subtitle, Disc Menu, Parental, Password, Default.

a. TV Type

Press up/down buttons to move the cursor to select following option, and press ENTER button to confirm.

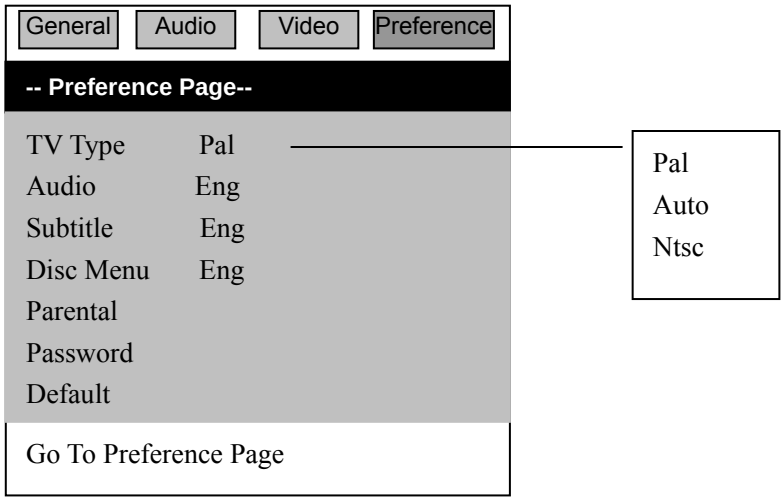

b. Audio

Press up/down buttons to move the cursor to select following option, and press ENTER button to confirm.

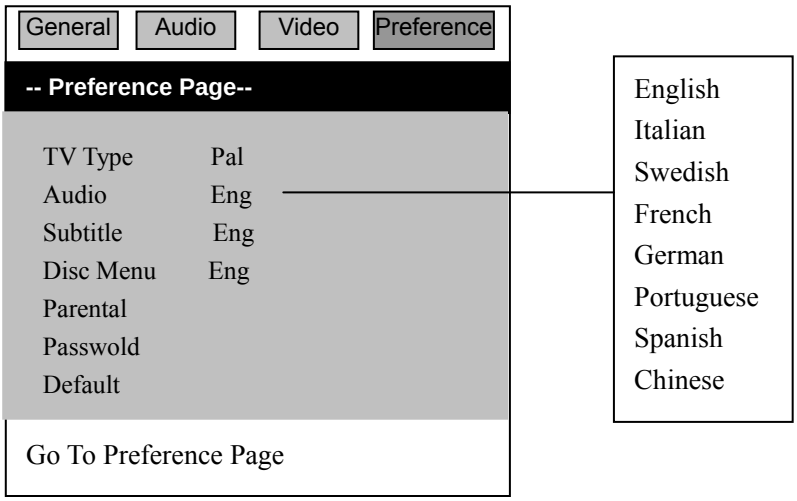

c. Subtitle

Press up/down buttons to move the cursor to select following option, and press ENTER button to confirm.

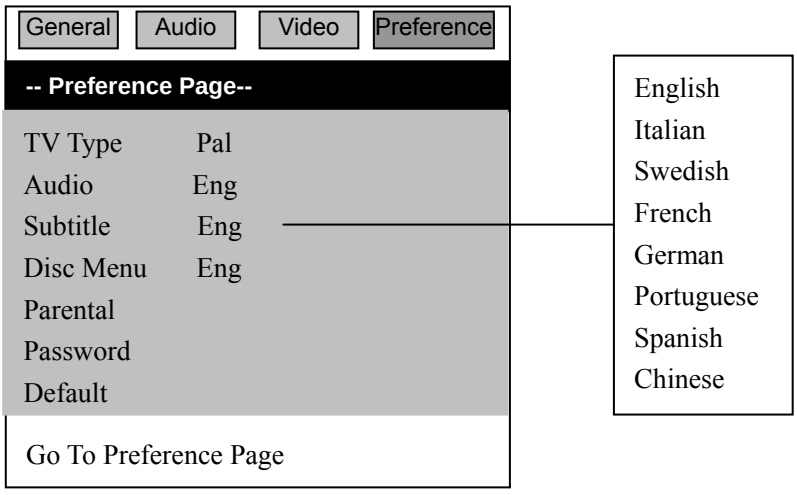

d. Disc Menu

Press up/down buttons to move the cursor to select following option, and press ENTER button to confirm.

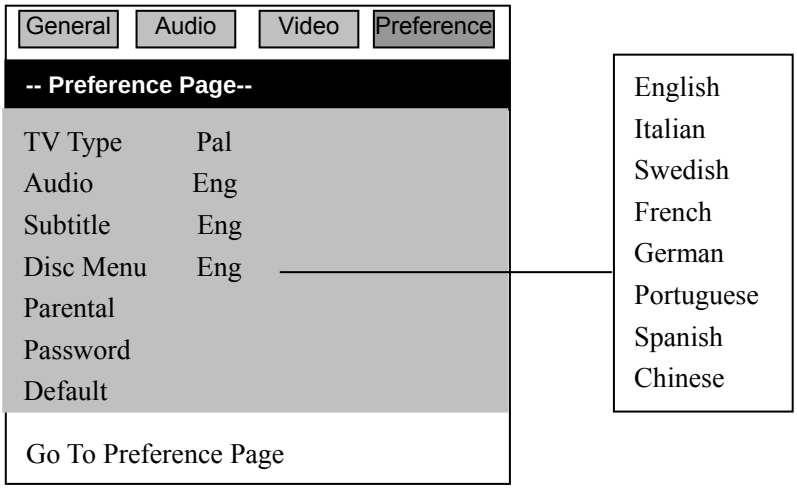

e. Parental

Press up/down buttons to move the cursor to select following option, and press ENTER button to confirm.

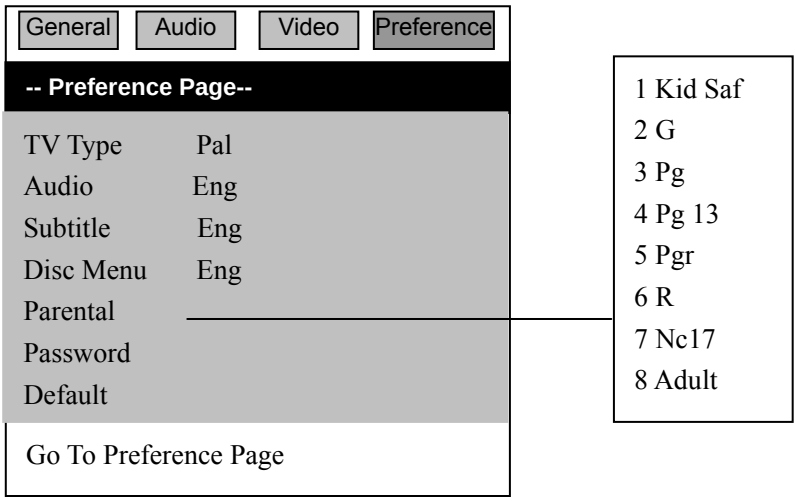

f. Password

Press up/down buttons to move the cursor to select following option, and press ENTER button to confirm.

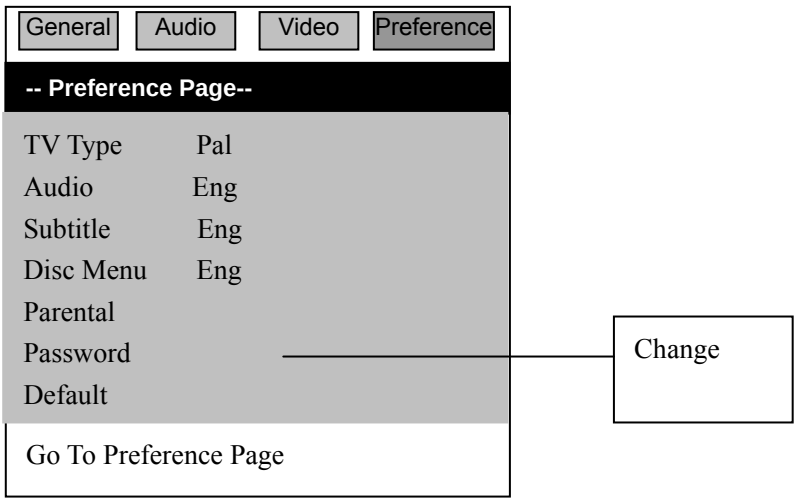

Set-in password is 3308, it is input by digit buttons directly to pass or lock

g. Default

Press up/down buttons to move the cursor to select following option, and press ENTER button to confirm.

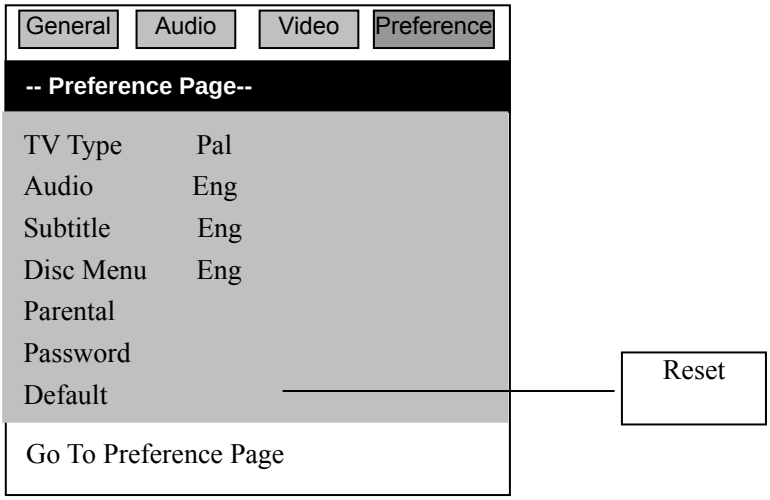

Note:

1. SETUP button is workable during play, but some operations are not with displaying note on screen. Then user can stop it and try it again.

3. Some DVD player have no the language user want to select, here, DVD player will play initially set language automatically.

Play MP3

Play MP3 disc

1. Play disc, after DVD player finishes search, it will display directory main menu.
2. Move up/down buttons to select favorite song directory.
3. Press **ENTER** button.
4. Press left/right buttons or digit buttons to select favorite track number.
5. Press **ENTER** button.

DVD player will play selected track.

Press REPEAT button, user is able to select single track repeat, directory repeat, whole disc repeat or off.

Other functions

During playing MP3 disc, DVD player have such as mute, sound volume control, pause, skip functions, too. Exact operation is to be referred above setting play content.

JPEG file decode play

Play picture by direct selection by digit buttons

1. During play, after DVD player finishes search, it will display directory main menu.
2. Move direction buttons to select audio frequency or JPEG picture at bottom of screen, and press **ENTER** to confirm.
3. Press digit buttons to select favorite option.

Selecting play by menu

1. During playing disc, after DVD player finishes search, it will display directory main menu.
2. Move direction buttons to select menu on screen, and press **ENTER** button to confirm.
3. Move direction buttons to select one option under menu, and press **ENTER** button to confirm.

Other functions

1. When play JPEG file, DVD player have same functions such as pause or repeat.
2. When plays JPEG file, press (title/return) button, DVD player will be returned to menu.
3. During play, press (previous) and (next) buttons, up/down pictures are to be selected.
4. Press (ZOOM) button to enlarge or shrink pictures, and finally press (ZOOM) button to off ZOOM function.
5. On ZOOM function, press direction buttons to move picture directionally.

ALL RIGHTS RESERVED
COPY RIGHT DENVER ELECTRONICS A/S

CE

www.denver-electronics.com